

Logging live data?

We have added some basic monitoring functionality to the launch version of the app. Live data is only displayed while it is recording and you will find the log files in the documents section of your device. Go to Documents and you will find a TDI Flasher folder.

We currently log and display:

- **Engine RPM**
- **Vehicle Speed (km/h)**
- **Boost Pressure (hPa)** - This figure is including atmospheric pressure.
- **Engine Torque (NM)** - This is the logged engine torque it is not necessarily a direct reflection of the true achieved torque, but it will indicate the logged torque should we need to troubleshoot any issues with a tune.
- **Engine (BHP)** - Please note this is a calculated number based on logged engine torque and RPM it is for representational use only.

Please note you can record live data on any supported vehicle you do not need a licence.

Revision #1

Created 23 August 2023 18:21:07 by TDI Flasher

Updated 23 August 2023 18:22:38 by TDI Flasher